



Polycom SoundStation Back Housing Replacement

Follow this guide to take off the back housing of the phone to access the motherboard and other parts.

Written By: Cali Nowak Credit



INTRODUCTION

Taking off the back of this phone will allow you to look at or replace all of the pieces inside this device. This is a prerequisite guide for any other replacement you would like to accomplish with your SoundStation.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Housing



- Flip the device over. Using a Phillips #00 screwdriver, remove the black 10mm screw on each three legs of the phone.
- Using a Phillips #00 screwdriver, remove the two silver 7mm screws as pictured.

Step 2

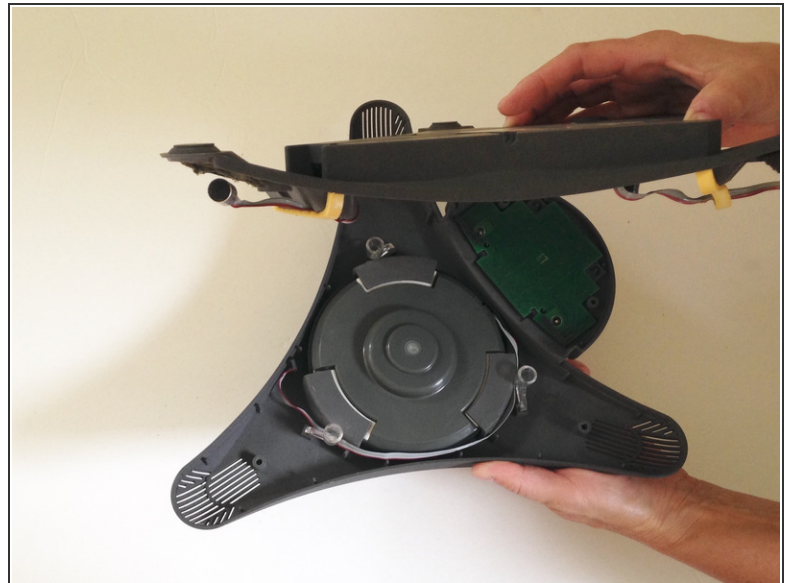

- Gently lift and separate the back housing from the rest of the device. Now you've got the back housing off!

To reassemble your device, follow these instructions in reverse order.

